


Adding Analog Meter To FT-857

Using An Existing SWR Meter

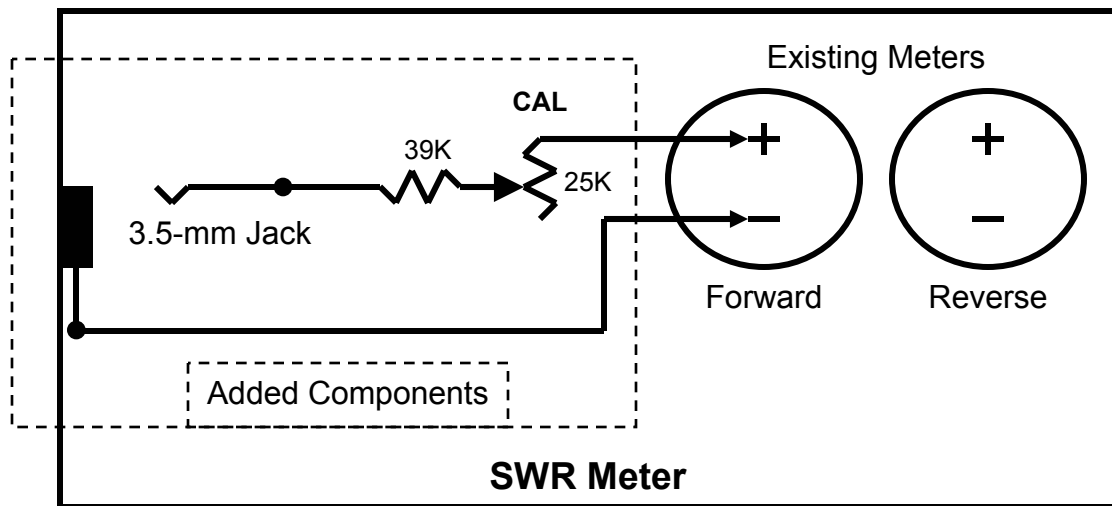

Notes:

1. Plug jumper cable into the jack on the SWR meter and the other end into the Meter jack on the front panel of FT-857.
2. Set Menu Mode 060 to FS and adjust added CAL pot in the SWR meter for full scale on SWR meter.
2. Set Menu Mode 060 to SIG to display signal strength.
3. Set Menu Mode 061 to OFF to disable external meter transmit function.
4. With a Daiwa CN-520 SWR meter a 5 watt drop in meter reading at 100 watts was observed (5% drop).